

Motor Mount Installation

- **Disconnect Power Source Before making Any Adjustment**

Refer to pictures below

1. Insert the 3-10/32 button head screws through the motor mount into the bearing housing and tighten down
2. Slide the pulley over the shaft and tighten down the set screw
3. Make sure the belt is on the small pulley only up in housing
4. Slide the cog belt over the big pulley and insert the two 10/32 screws through the motor mount into the aluminum hex nuts on the motor
5. Slide the motor up and snug the tension of the belt
6. Tighten down the screws



